



CAT.C16: SEATS Q155

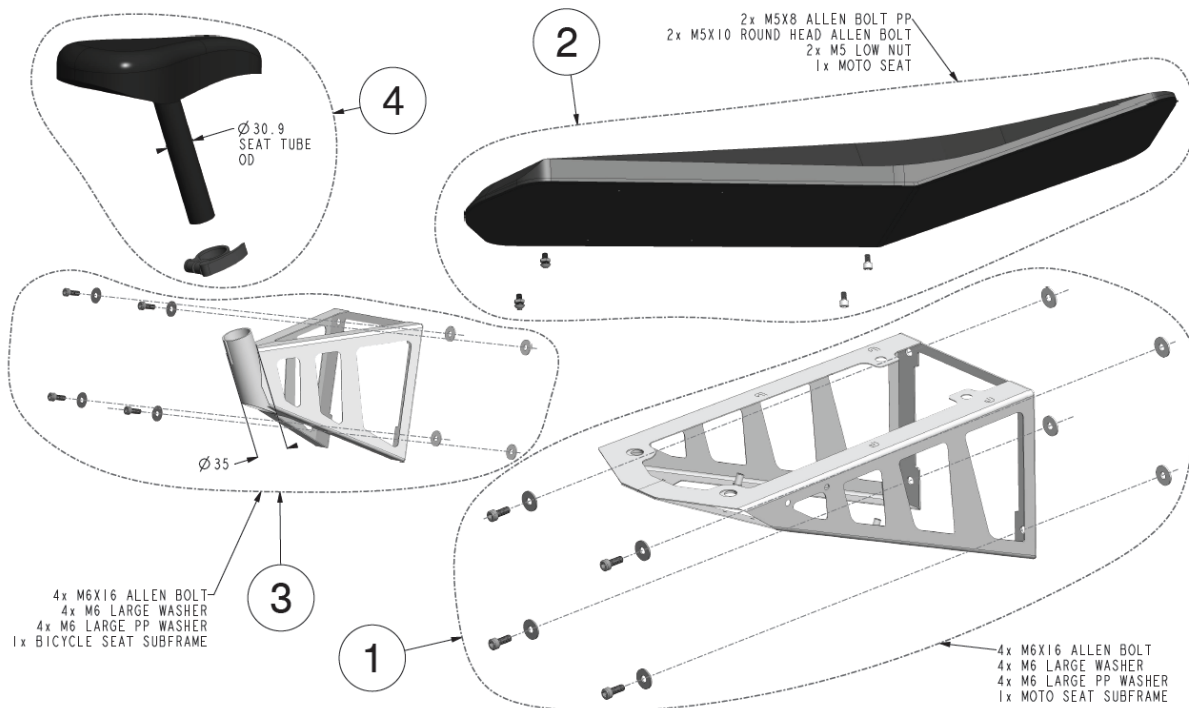

CAT.C16: SEATS Q80

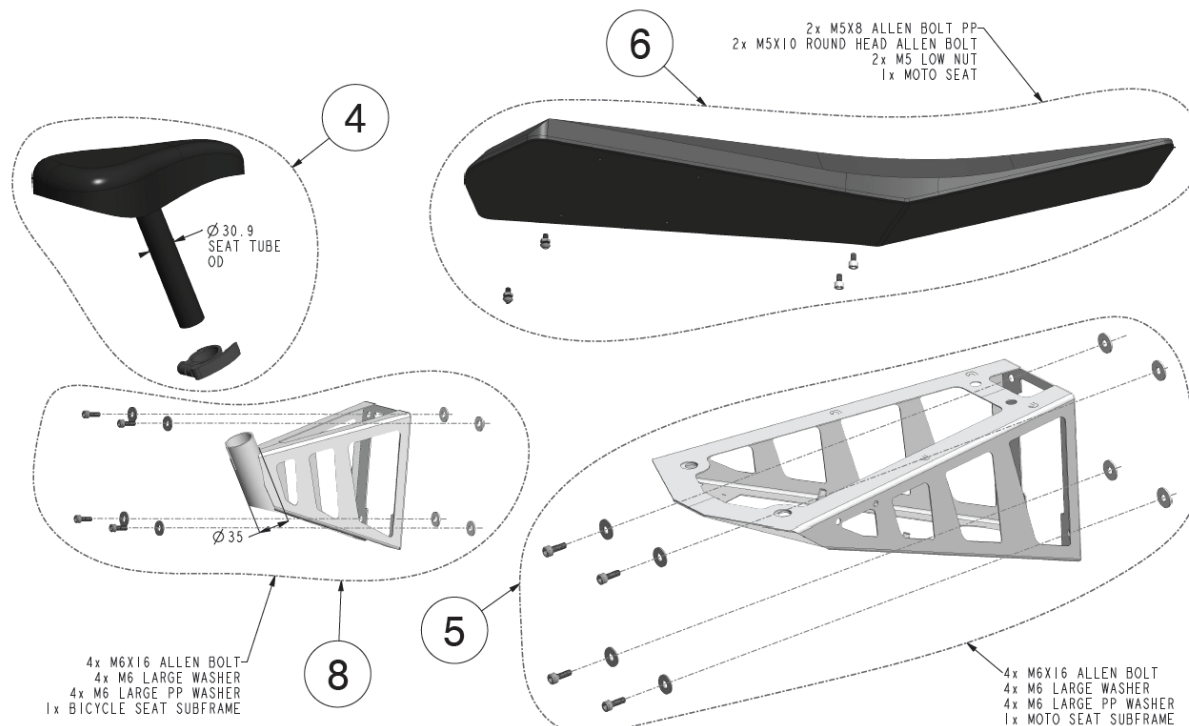

(1,5):



Scope of delivery.



Scope of delivery – mounting material.





Use PP washer between the frame and subframe.





Tighten – moderate to strong. Use L-shaped Allen key

(hex key) tool.

Decals application



Clean the surface.



Select correct decal.



Use references for correct position.



