




CAT.C30: BATTERY KITS Q80 BATTERY INSTALLATION KIT

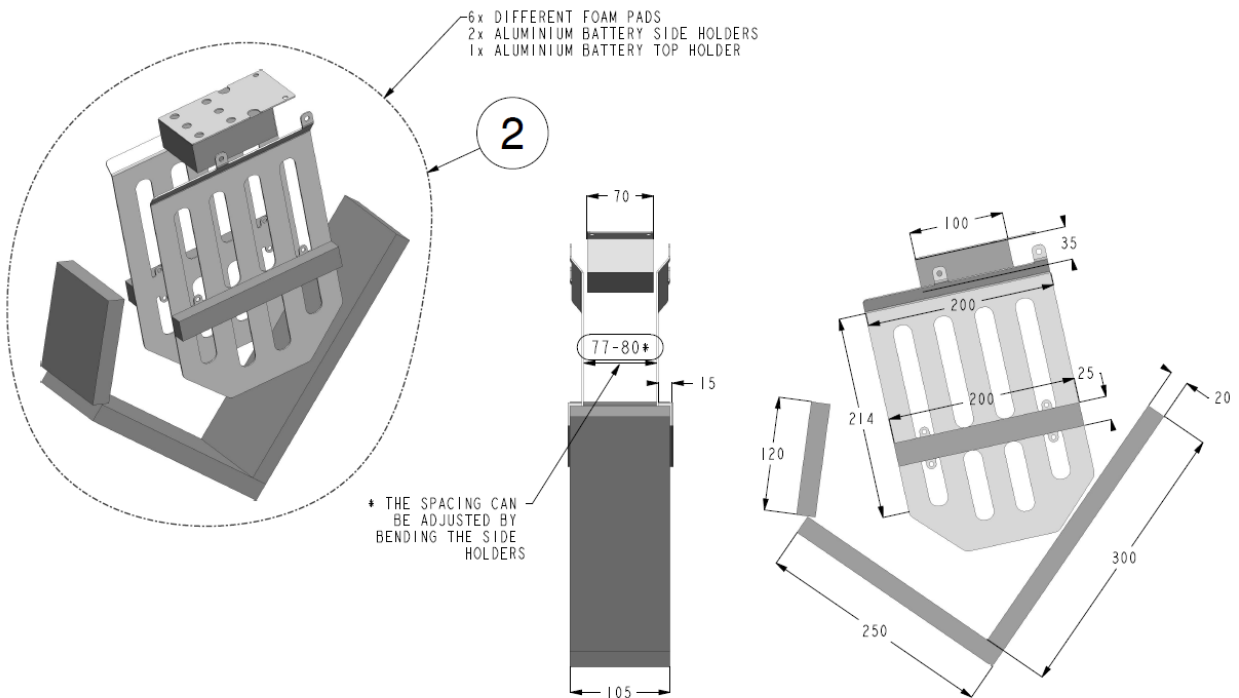

(2)

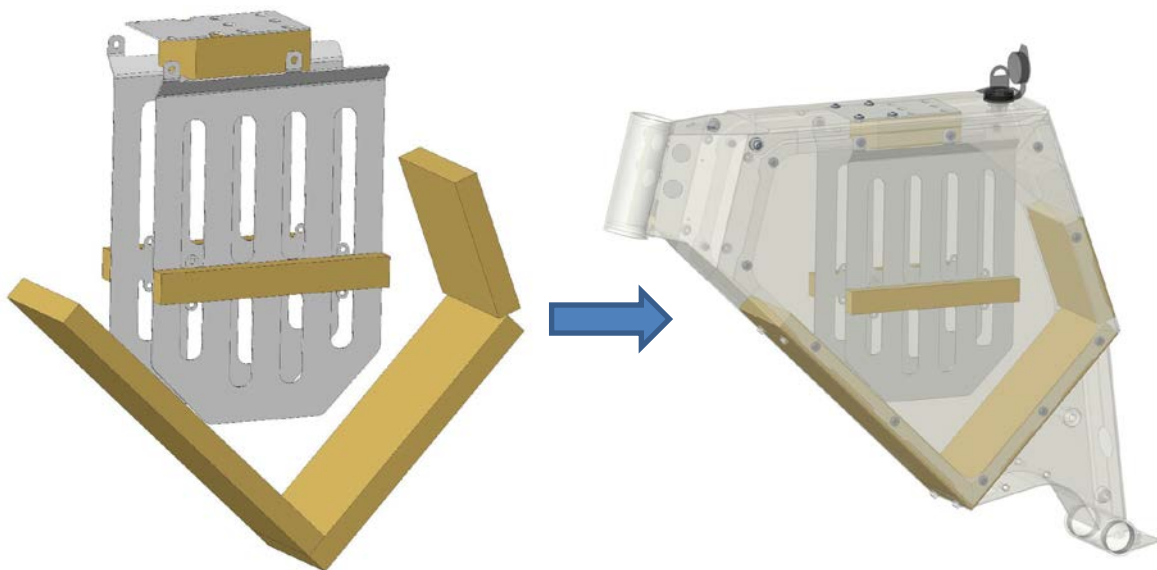

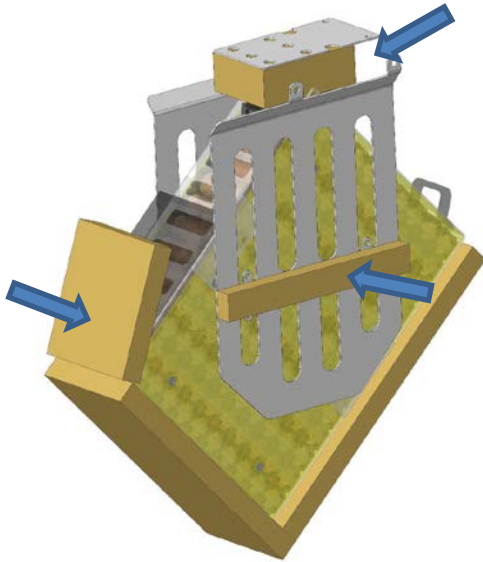

- Install all components as shown in the photo.
- Use the bolts from the frame kit (side plates and top cover) to mount the aluminum side and top holders.
- The bottom foam pads can be secured with adhesive (not included), though this is optional.
- Use zip ties to attach the side foam pads to the aluminum plates, following the same method for the top aluminum plate.
- Adjust the spacing of the side holders to fit your battery by using foam of varying thickness or by bending the aluminum holder plate.
- Ensure the top foam is shaped to match your battery for proper pressure when the top cover is closed.