





CAT. 26: Horn (2), Retro reflector (4), Side reflectors (5), Taillight (6), Taillight bracket (7), Blinkers (14)

CAT.C26: LIGHTS, MIRRORS, HORN
FOR Q155/Q80/Q76/Q140MD

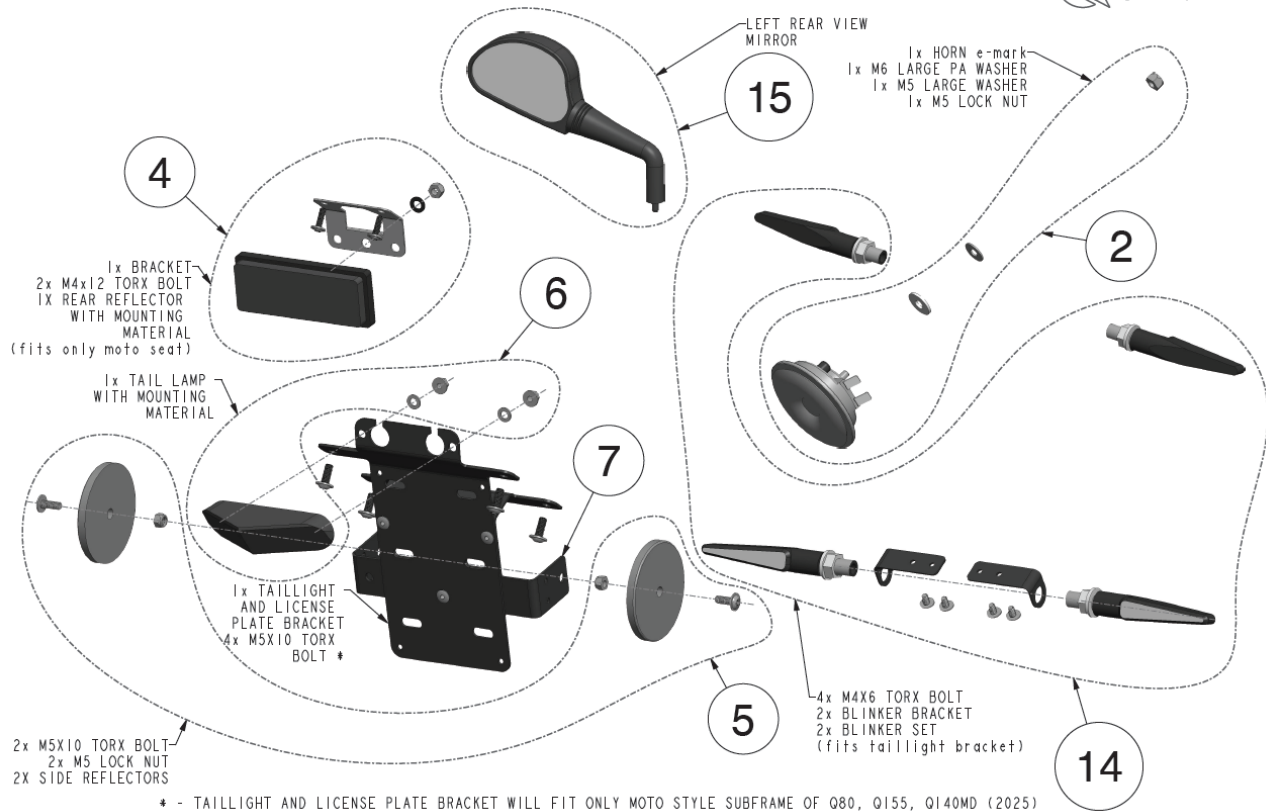



Installation of horn, taillight, reflectors, mirror, blinkers

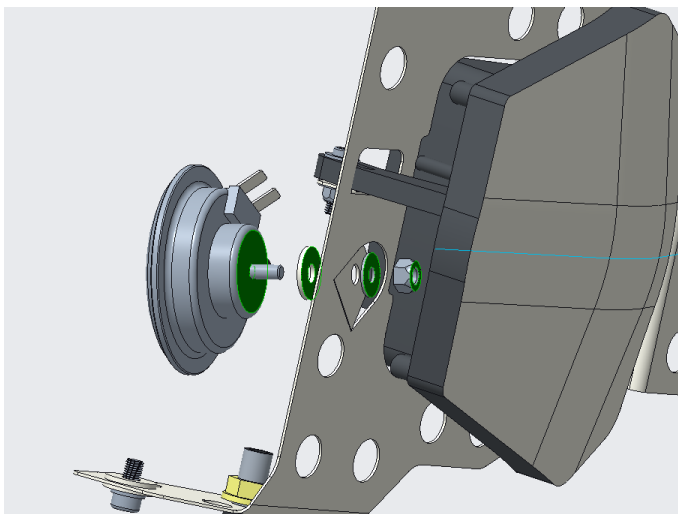

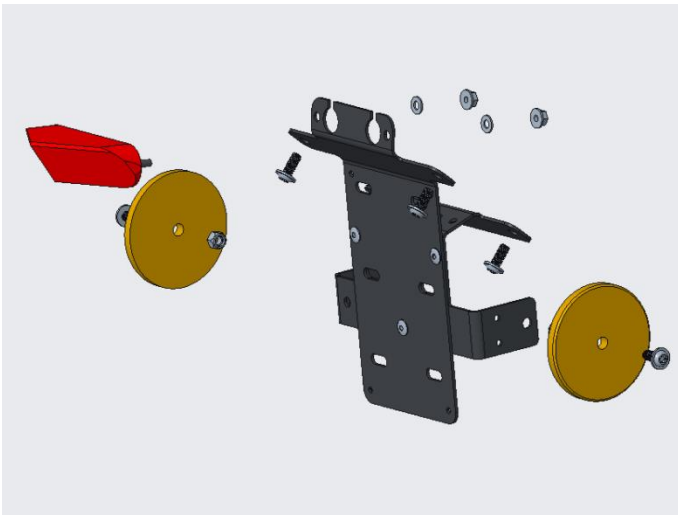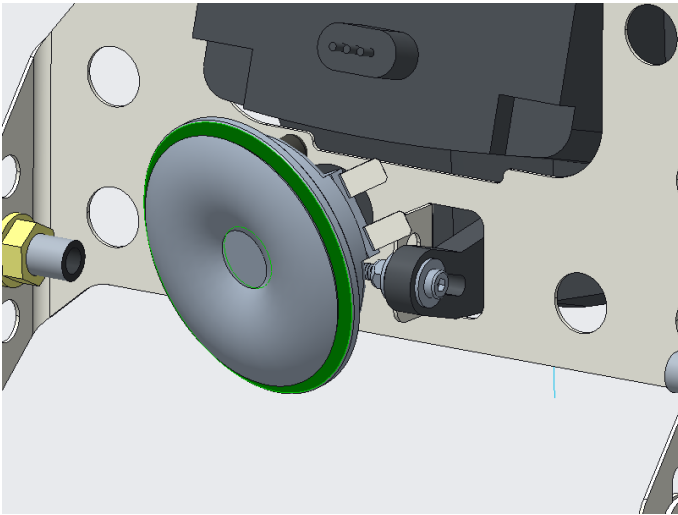


Assemble the bracket, taillight, side reflectors.

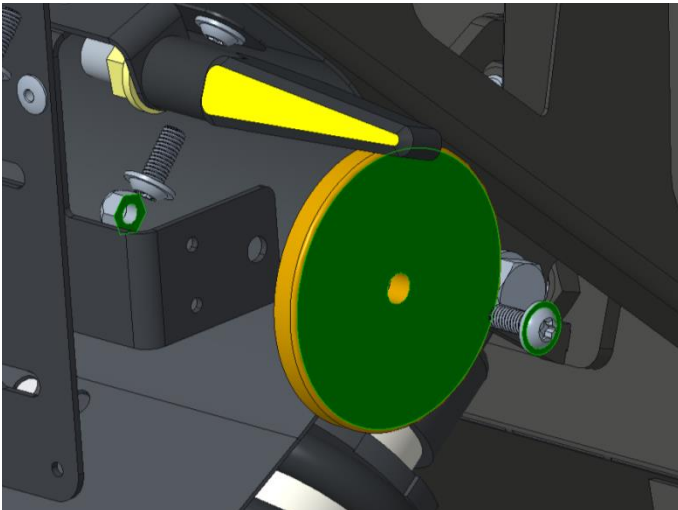


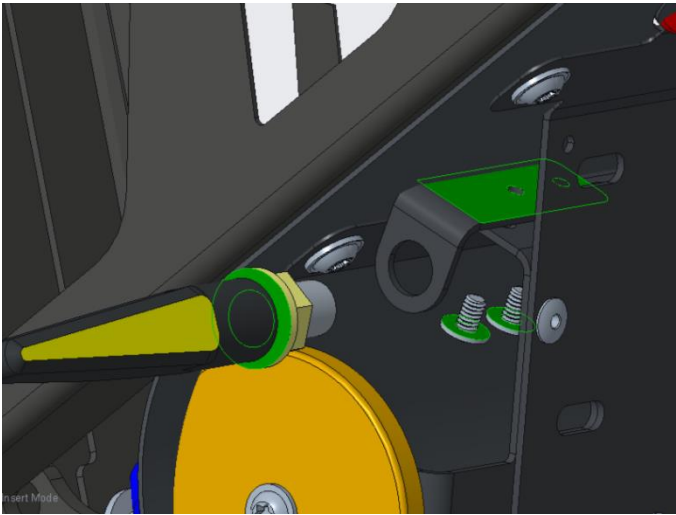


Install rear blinker brackets and blinkers (if ordered).

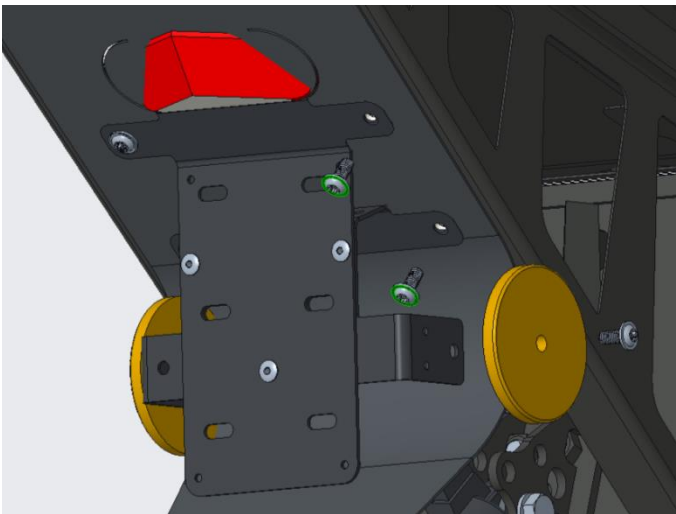

Install the whole bracket assembly on the moto subframe with 4 x M5x10 Torx bolts. Route the taillight wires through the cut-out hole in the under-seat mudguard. Connect taillight and blinkers to the wiring harness.

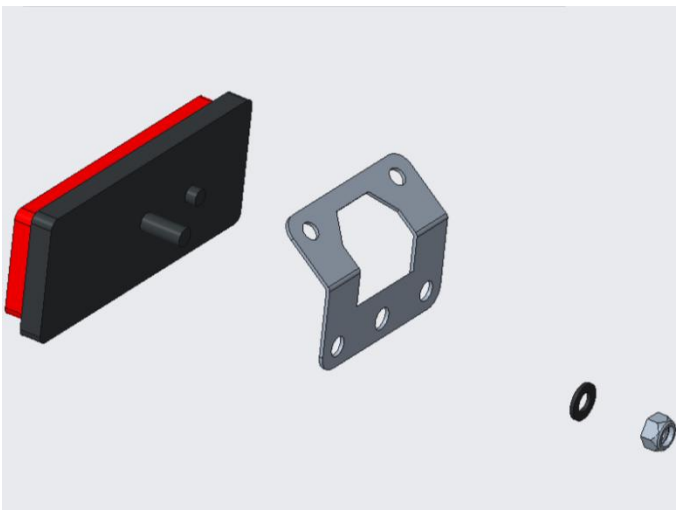


Assemble rear retro reflector.

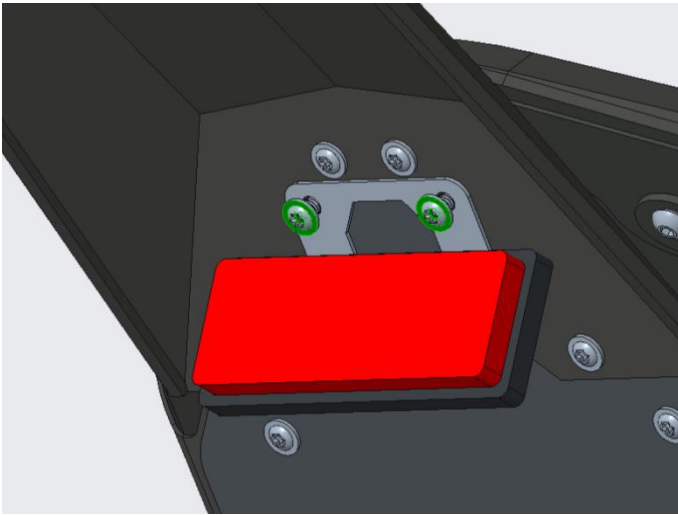


Mount it to the moto subframe with 2 x M4x16

Torx bolts.

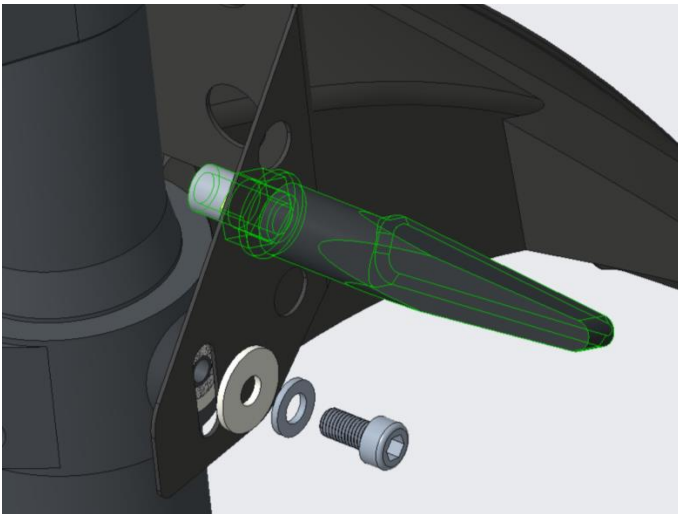

Front blinker installation – use one of 3 holes on the front mask Tighten the nut by hand. Connect both blinkers to the wiring harness.

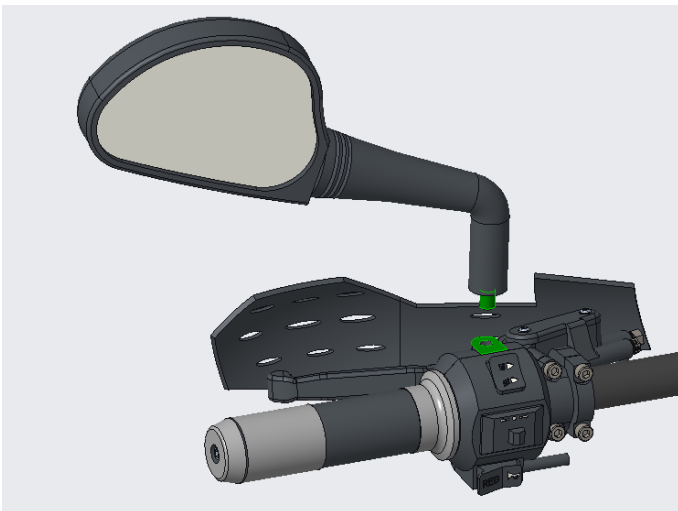

Install the rear view mirror to the handlebar switch block.